


## INSTRUCTION MANUAL

### HQ TREMOLO

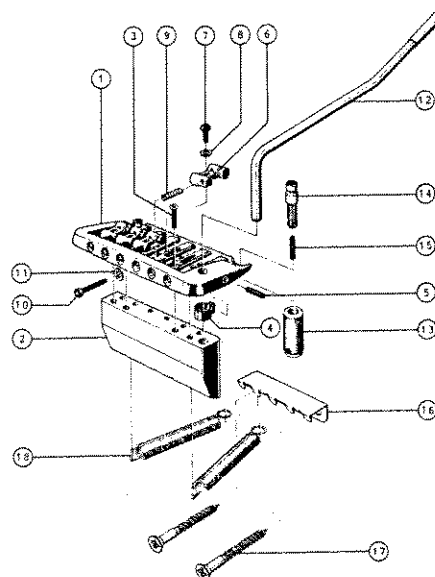

- 1 BRIDGE BASE
- 2 BLOCK
- 3 BLOCK SCREW
- 4 ARM BUSH
- 5 ARM TORQUE ADJUSTMENT SCREW
- 6 SADDLE
- 7 SADDLE LOCK SCREW
- 8 WASHER
- 9 SADDLE SPRING
- 10 INTONATION ADJUSTMENT SCREW
- 11 SPRING WASHER
- 12 ARM
- 13 ANCHOR
- 14 HEIGHT ADJUSTMENT BOLT
- 15 STUD LOCK SCREW
- 16 SPRING HOOK
- 17 SPRING TENSION ADJUSTMENT SCREW
- 18 SPRING

#### INTONATION ADJUSTMENT


1. Loosen SADDLE LOCK SCREW.
2. Adjust intonation using phillips head screw on the back of bridge.
3. Retighten the SADDLE LOCK SCREW.

#### ARM TORQUE ADJUSTMENT

1. Insert arm into tremolo. If it is difficult to insert arm, loosen ARM TORQUE SCREW on side of bridge, push arm all the way into hole, and then retighten screw so the arm is at the tension that you desire.

NOTE: BE CAREFUL NOT TO TIGHTEN SCREW TOO TIGHT.

### MAGNUM-LOCK

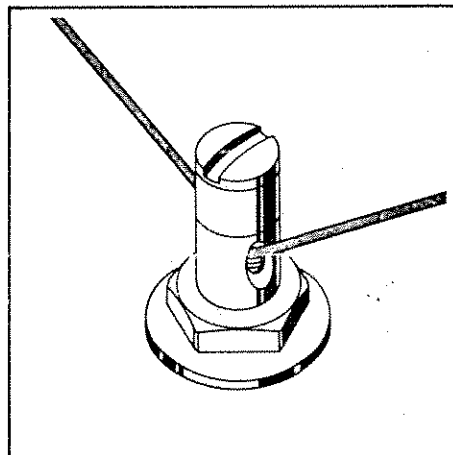

#### RELEASING A STRING FROM THE MACHINE HEAD

1. Detune string. When there is no tension left on the tuner, keep turning tuning key, and the cap of the machine head will stop moving. A couple extra turns and the string will lose tension, or if you prefer, you may loosen the cap using a coin.

#### RESTRINGING

1. Insert the string through the machine head cap. Pull the string taut, and bend 90 degrees around the post.
2. Turn machine head, and after several turns, the string will lock automatically. Once tuned to pitch, stretch string out a bit and retune.

**Ibanez**