


## ● I. Control Panel

### 1. Front Panel

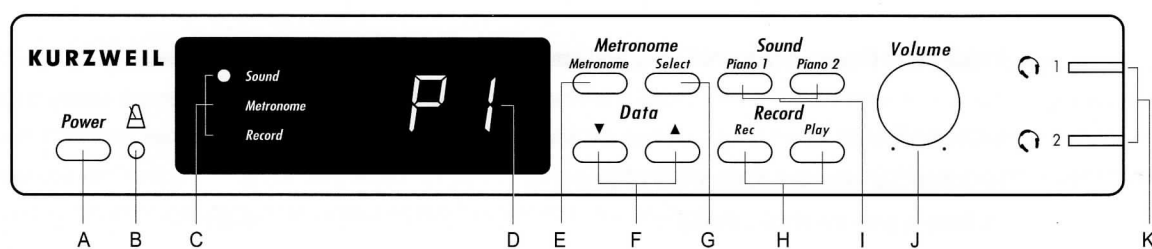

A. <b>Power</b> Button	Press to turn the KVS-1 on; press again to turn it off.
B. <b>Beat Indicator</b>	Flashes according to the metronome beat.
C. <b>Mode Indicator</b>	Shows which of the 3 modes is selected and flashes when receiving MIDI data.
D. <b>Numeric Display</b>	Shows either an abbreviated name or a numeric value for a parameter.
E. <b>Metronome</b>	Press to turn the metronome on; press again to turn it off.
F. <b>[▼] Data [▲]</b>	Modifies the currently selected parameter.
G. <b>Select</b>	Selects a parameter for display and modification.
H. <b>Record / Play</b>	Record, Play: Control Record and Play functions of the Recorder.
I. <b>Sound</b>	Chooses either Piano1 or Piano 2 for the KVS-1 piano
J. <b>Volume</b>	Adjust the volume of the output of the headphone jacks.
K. <b>Headphone Jacks &amp; Indicators</b>	Up to two headphones may be plugged into the jacks. The Indicator changes from green to red to show that headphones are plugged in properly.