


# Panel & Display Description

## Front Panel

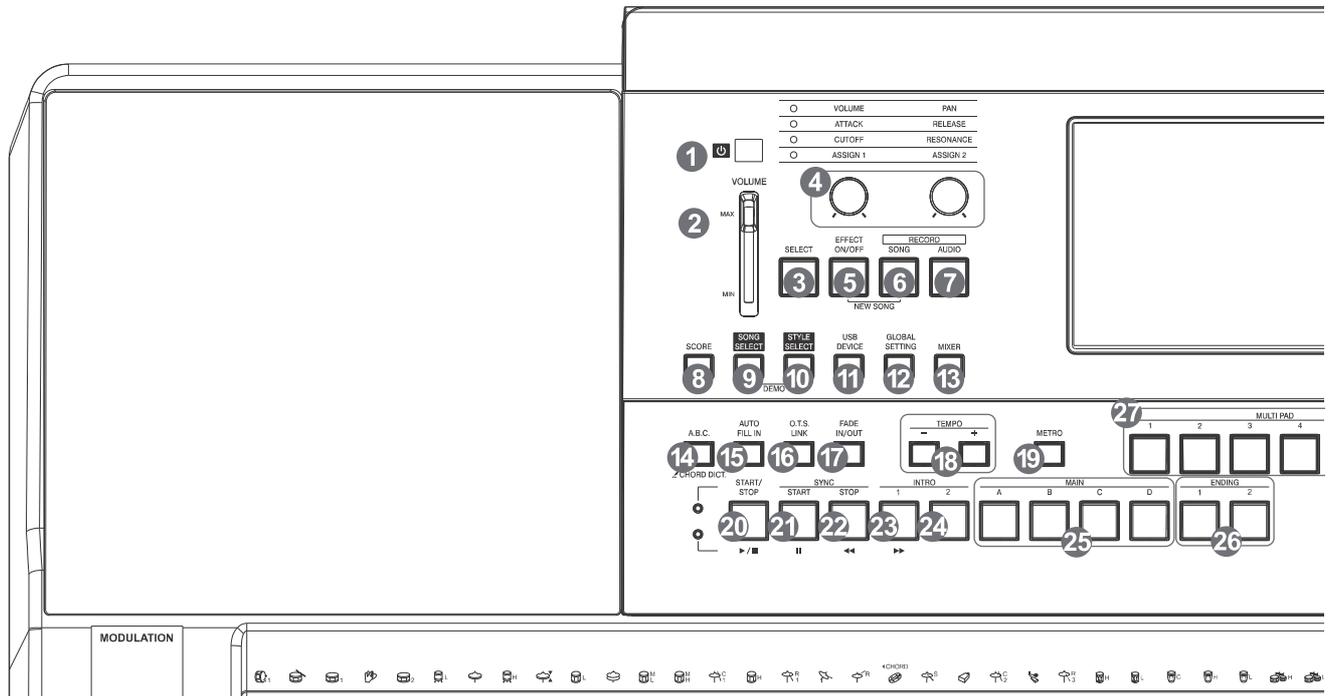

### 1. POWER ON/OFF BUTTON

Turn the power on or off.

### 2. MASTER VOLUME SLIDER

Adjust the master volume.

### 3. SELECT BUTTON

Select the four effect combinations of GROUP KNOBS sequentially.

### 4. GROUP KNOBS

**Effect1:** Adjust volume, pan of the current part(R1/R2/R3/L).

**Effect2:** Adjust attack time, release time of the current part (R1/R2/R3/L).

**Effect3:** Adjust the filter cutoff frequency, the amount of resonance applied at the filter cutoff frequency of the current part(R1/R2/R3/L).

**Effect4:** The knob effect can be assigned separately. See “Controller”.

### 5. EFFECT ON/OFF BUTTON

Turn the special effect such as arpeggio, harmony, or chopper on or off.

### 6. RECORD SONG BUTTON

Enter the RECORD SONG interface. You'll record your performance in SMF format.

### 7. RECORD AUDIO BUTTON

Enter the audio recording is in ready state. You'll record your performance in WAV format.

### 8. SCORE BUTTON

Show the staff of the current song (SMF).

### 9. SONG SELECT BUTTON

Enter the SONG SELECT interface.

### 10. STYLE SELECT BUTTON

Enter the STYLE SELECT interface.

### 11. USB DEVICE BUTTON

Enter the USB DEVICE interface.

### 12. GLOBAL SETTING BUTTON

Enter the GLOBAL SETTING interface.

### 13. MIXER BUTTON

Enter the MIXER interface.

### 14. A.B.C. BUTTON

Turn the A.B.C. MODE on or off.

### 15. AUTO FILL IN BUTTON

Turn the AUTO FILL IN on or off.

### 16. O.T.S. LINK BUTTON

Turn the O.T.S. LINK on or off. If it is turned on, the One Touch Settings can be changed when you select different style.

### 17. FADE IN/OUT BUTTON

Turn the FADE IN or OUT on or off.

### 18. TEMPO +, TEMPO – BUTTONS

Adjust the current tempo.

### 19. METRO. BUTTON

Turn the Metronome on or off.

### SONG CONTROL

#### 20. PLAY/STOP BUTTON

Start playing the song or stop the song playback.

#### 21. PAUSE BUTTON

Pause the song playback.

#### 22. RW BUTTON

Rewind the song.

#### 23. FF BUTTON

Fast forward the song.

### STYLE CONTROL

#### 20. START/STOP BUTTON

Start or stop playing the style.

#### 21. SYNC. START BUTTON

Turn the SYNC. START on or off.

#### 22. SYNC. STOP BUTTON

Turn the SYNC. STOP on or off.

#### 23. INTRO 1 BUTTON

Play the intro 1.

#### 24. INTRO 2 BUTTON

Play the intro 2.

#### 25. MAIN A, B, C, D BUTTONS

Play the main part.

#### 26. ENDING 1, 2 BUTTONS

Play the ending.