

Factory Local Presets

Wah

Jan. 4th, 2013

Types	Presets (Browse)	
	old	new
Wah Wah	BP Touch	WWAH Touch 01
	WAH	WWAH Default
	WAH CAE	WWAH Cae
	WAH CRY	WWAH Cry
	WAH IBZ WH TEN	WWAH Ibz Wh Ten
	WAH MF 01	WWAH Kemper 01
	WAH MF 02	WWAH Kemper 02
	WAH Touch	WWAH Touch 02
Low Pass	LP Touch	WLPF Touch
High Pass	HP Touch	WHPF Touch 01
		WHPF Touch 02
Vowel Filter		WVOW Funk
	VF Touch	WVOW Touch
Wah Phaser		WPHA Fonk Faze
	BR Touch	WPHA Touch
	RR Touch	WPHA Touch
Wah Flanger	CF Touch	WFLA Touch
	Unholy	WFLA Unholy
Rate Reducer		WRR Default
Ring Modulator		WRM Ring Mod Default
		WRM TremMon Default
		WRM TremSter Default
Frequency Shifter		WFS Default

Distortion

Types	Presets (Browse)	
	old	new
Bit Shaper		BIT Shaper Default
Recti Shaper		RECT Oct Dirty
Soft Shaper		SHAPR Soft Default
		SHAPR Dirt
Hard Shaper		SHAPR Hard Default
Wave Shaper		SHAPR Wave Default
Green Scream		DIST Green Default
		DIST TS Boost
	TS Crunch	DIST TS Crunch
	TS Full	DIST TS Full
	TS Mello	DIST TS Mello
Plus DS		DIST Plus DS Default
	MXR Crunch	DIST MXR Crunch
	MXR Full	DIST MXR Full
One DS		DIST One Default
	DS Brite	DIST DS Brite
	DS Dark	DIST DS Dark
	DS Med	DIST DS Med
Muffin		DIST Muffin Default
	BM Brite	DIST BM Brite
	BM Full	DIST BM Full
	BM Soft	DIST BM Soft
Mouse		DIST Mouse Default
		DIST PCR Rat Boost
	PCR Full	DIST PCR Full
	PCR Med	DIST PCR Med
Fuzz DS		DIST Fuzz Default
		DIST FF Old
	FF Hard	DIST FF Hard
	FF Soft	DIST FF soft
Metal DS		DIST Metal Default
		DIST Met Chug
		DIST Met Lead
Treble Booster		BOOST Treble Default
		BOOST TB Fat
Lead Booster		BOOST Lead Default
Pure Booster		BOOST Pure Default
		BOOST PB Confidence
		BOOST PB Solo
Wah Pedal Booster		BOOST Pedal Default

Stomps/X/Mod

Types	Presets (Browse)	
	old	new
Graphic EQ		EQ Graphic Default
Studio Equalizer		EQ Studio Default
Studio Equalizer		EQ Cut the Mix
Studio Equalizer		EQ Rythm Mix
Studio Equalizer		EQ Telephone
Studio Equalizer		EQ Vintage Mix
Metal Equalizer		EQ Metal Default
Stereo Widener		EQ Ster.Wide Default

Compressor & Gate

Types	Presets (Browse)	
	old	new
Compressor		COMP Default
		COMP Hard
		COMP Soft
	COMP 01	
Gate 2:1		GATE 2:1 Default
Gate 4:1		GATE 4:1 Default

Chorus

Types	Presets (Browse)	
	old	new
Vintage Chorus		CHOR Vint Subtle
	VC PSY	CHOR Vint Psy
	VC Shimmer	CHOR Vint Shimmer
	VC Slow	CHOR Vint Slow
Hyper Chorus	HC Fast	CHOR Hyper Fast
	HC Medium	CHOR Hyper Medium
	HC Slow	CHOR Hyper Slow
Air Chorus		CHOR Air High End
	AC Fast	CHOR Air Fast
	AC Slow	CHOR Air Slow
Vibrato		VIB Sky
		VIB Subtle
		VIB Watery
	VIB Fast	VIB Fast

	VIB Slow	VIB Slow
Rotary Speaker	Rotor Fast	ROT Fast
	Rotor Slow	ROT Slow
Tremolo		TREM Fast
		TREM Slow
		TREM Classic

Phaser & Flanger

Types	Presets (Browse)	
	old	new
Phaser		PHA Subtle Phase
	Eddy Phaser	PHA Eddy
	Stone Phaser 01	PHA Stone 01
	Stone Phaser 02	PHA Stone 02
Phaser Vibe		PHA Uni Default
		PHA Uni Vintage
Phaser Oneway		PHA 1way Default
		PHA 1way Downfall
		PHA 1way Watery
Flanger		FLA Light
		FLA Strong
		FLA Rhythm
		FLA Subtle
Flanger Oneway		FLA 1way Default
		FLA 1way Cab.Obvious
		FLA 1way Downer

Loop

Types	Presets (Browse)	
	old	new
Loop Mono		LOOP Mono Default
Loop Stereo		LOOP Stereo Default
Loop Distortion		LOOP Dist. Default

Delay

Types	Presets (Browse)	
	old	new
Tap Delay	Hipass Delay	Tap Hipass
	Long Delay	Tap Long
	PingPongDelay	Tap Ping Pong
	Simple Delay	Tap Simple
	TheEdgeDelay	Tap The Edge 01
		Tap The Edge 02
		Tap The Edge 03
Free Delay	Oiltank Delay	Free Oiltank
	Slap Delay	Free Slap
Analog Delay	Saturday Night	Analog Saturday
	Shatter Delay	Analog Shatter
	Tape Delay	Analog Tape
	Underwater	Analog Underwater

Reverb

Types	Presets (Browse)	
	old	new
Hall	Ambience	
	Ambience 2	
	Medium Hall	Hall Medium 01
	Medium Hall 2	Hall Medium 02
	Reverb MF 01	Hall Amp Verb 01
	Reverb MF 02	Hall Amp Verb 02
	Room 1	
	Room 2	
	Room 3	
	Room 4	
	Room 5	
		Hall Le X
Large Room		Large Room A
		Large Room ER
Small Room		Small Room
		Small Room ER
Ambience		Ambience 01
		Ambience 02
Matchbox		Matchbox Amp Spiral
		Matchbox Royal Tub