

Übersicht YAMAHA PSR-Serie

Jahr	PSR	Tasten	Anschl. Dynam.	Panel Voices	XG Voices	Polyph	Styles	Demos	Reverb	Chorus	DSP	Harmony	Dual	Split	Anschlüsse		
															MIDI	To Host	USB
1989	3500	61	?	100			100							*	*	*	
1989	4500	61	*	100			100							*	*	*	
1990	4600	61	*	100			100		3					*	*	*	
1991	200	61		100		?	50	15	*						*		
1991	300	61	*	100		?	50	15	*					*	*	*	
1991	400	61	*	128		28	101	3	*			*				*	
1991	500	61	*	128		28	103	3	*		2	*			*	*	
1991	6700	76	*	100		40	36	2	25	8		16				*	
1992	600	61	*	100		28	103	3	*			*		*	*	*	
1993	210	61	*	100		28	50	15	*			6		*	*		
1993	310	61	*	100		28	100	15	*			6		*	*	*	
1993	410	61	*	128		28	80	5				10			*	*	
1993	510	61	*	128		28	103	6			8	10			*	*	
1993	5700	61	*	100		38	36	4	3	9		16				*	
1994	6000	61	*	128		38	50	21	23	9		16		*	*	*	
1994	1700	61	*	128		28	100	8			8	10		*	*	*	
1994	2700	61	*	128		28	100	8			8	10		*	*	*	
1995	220	61	*	100		28	100		*					*	*	*	
1995	230	61	*	100		28	100		*					*	*	*	
1995	320	61	*	128		28	100	8						*	*	*	
1995	420	61	*	128		28	100	8						*	*	*	
1995	520	61	*	141		32	100	25	12	9	45	22		*	*	*	
1995	620	61	*	141		28	100	25	12	9	45	22		*	*	*	
1995	4000	61	*	367		32	120	14	16	10	50	16		*	*	*	
1995	7000	61	*	473		64	120	14	16	10	56	16		*	*	*	

Jahr	PSR	Tasten	Anschl. Dynam.	Panel Voices	XG Voices	Polyph	Styles	Demos	Reverb	Chorus	DSP	Harmony	Dual	Split	Anschlüsse				
															MIDI	To Host	USB		
1997	330	61	*	128		31	100	20	9			25	*	*	*				
1997	530	61	*	200	480	32	100	12	13	10	46	16	*	*	*	*			
1997	630	61	*	215	480	32	100	15	13	10	46	16	*	*	*	*			
1997	730	61	*	200	480	64	100	15	13	10	46	16	*	*	*	*			
1997	8000	61	*	261	480	64	214	21	24+3	20+3	78+10	50+3	*	*	*				
1998	225	61	*	100		32	100	3	8	4	33	26	*	*	*				
1998	DJX	61	*	140	128 (GM)	32	100	3	8	4	33							*	
1999	240	61	*	100		16	100	100										*	
1999	270	61	*	128		32	100		8	4	33	26	*	*	*				
1999	340	61	*	100		32	100	3	8	4	33	26	*	*	*				
1999	540	61	*	215	480	32	106	5	24	16	74	22	*	*	*	*		*	
1999	640	61	*	223	480	32	160	8	24	16	74	22	*	*	*	*		*	
1999	740	61	*	267	480	64	160	10	24	20	102	22	*	*	*	*		*	
1999	9000	61	*	331	480	126	125		29+3	25+3	164+10	17	*	*	*				
2000	260	61	*	100		16	100											*	
2000	DJX II	61		203	180 (alt.)	32			11	7								*	
2001	350	61	*	116	Expand	32	106		8		38	26						*	
2001	550	61	*	219	480	32	112	9	24	16	74	22	*	*	*				
2001	1000	61	*	233	480	32	169		23+3	15+3	93+3							*	*
2001	2000	61	*	313	480	64	181		29+3	25+3	252+13	49+10						*	*
2002	290	61	*	108	480	32	135		8	4	38	26	*	*	*				
2003	275	61	*	108	360	32	100		9	4		26	*	*	*				
2003	1100	61	*	287	480	32	181		23+3	15+3	92+3							*	*
2003	2100	61	*	338	480	64	197		29+3	25+3	252+13	49+10						*	*

Jahr	PSR	Tasten	Anschl. Dynam.	Panel Voices	XG Voices	Polyph	Styles	Demos	Reverb	Chorus	DSP	Harmony	Dual	Split	Anschlüsse		
															MIDI	To Host	USB
2004	295	61	*	114	359	32	135		9	4		26	*	*	USB		
2004	450	61	*	135	480	32	140		12	6	39	26		*	*		
2004	1500	61	*	297	480	96	190	5	35+3	30+3	289+13				*		*
2004	3000	61	*	332	480	128	240	5	35+3	30+3	298+13	61+10			*		*
2005	E203	61		129		32	102		9								*
2005	E303	61	*	108	359	32	106		9	4		26	*	*	*		
2006	E403	61	*	116	361	32	155		9	4		26	*	*	*		
2006	S500	61	*	283	361	32	150		25	30	178	26	*	*	USB		*
2007	E213	61		129	233	32	102		9								*
2007	E313	61	*	108	359	32	106		9	4		26	*	*	*		
2007	E413	61	*	116	361	32	165		9	4		26	*	*	*		
2007	EZ-200	61	*	1	361	32	100		9								*
2007	S700	61	*	317	480	96	205		34+3	29+3	297+13		*	*	*	*	*
2007	S900	61	*	392	480	128	305		34+3	29+3	297+13	60+10	*	*	*	*	*
2008	S550	61	*	294	480	64	176		35	44	237	26	*	*	USB		*

Detailliertere Angaben in den YAMAHA-Handbüchern unter <http://www.yamaha.co.jp/manual/german/index.php>

Weitere Info's auch unter http://www.synrise.de/docs/types/y/yamaha/yamaha_psr-serie.htm

PSR	One Touch Setting	Registration Memory	Virtual Arranger	Groove & Dynamics	Music DB	Drum Pads	Multi Pads	Pitch Bend	Modulation	Guide LED's	Cartridge	Floppy Disk	Ausgangsleistung Netz/ Batteriebetrieb
3500		2				6		*	*				2x8W
4500		4				8		*	*				2x8W
4600		4				8		*	*				2x8W
200													2x2W
300													2x2W
400						4		*					2x8W/ 2x4W
500							4	*					2x8W/ 2x4W
6700		10/ 16						*	*			*	2x10W
600							4	*				*	2x8W/ 2x4W
210													2x2W
310													2x2W
410	*						4	*					2x4,5W/ 2x1,5W
510	*						4	*					2x4,5W/ 2x1,5W
5700		10/ 16					8	*	*			*	2x10W
6000	*	4x8					80 x 4					*	2x12W
1700	*	8						*	*			*	2x8W
2700	*	8				4	4	*	*			*	2x8W
220													2x3/ 2x6W
230										*	*		2x3/ 2x6W
320	*						11 x 4					*	2x6W/ 2x4,5W
420	*						14 x 4			*	*		2x6W/ 2x4,5W
520	*	8 x 4					21 x 4	*			*		2x6W/ 2x4,5W
620	*	8 x 4					21 x 4	*			*	*	2x6W/ 2x4,5W
4000	*	16x8					8	*	*			*	2x9W
7000	*	16x8					8	*	*			*	2x20W

PSR	One Touch Setting	Registration Memory	Virtual Arranger	Groove & Dynamics	Music DB	Drum Pads	Multi Pads	Pitch Bend	Modulation	Guide LED's	Cartridge	Floppy Disk	Ausgangsleistung Netz/ Batteriebetrieb
330	*						26 x 4				*		2x6W/ 2x5,5W
530	*	8 x 4	*				9 x 4	*			*		2x6W/ 2x4W
630		8 x 4	*				9 x 4	*				*	2x6W/ 2x4W
730		8 x 4	*	49/25/17			9 x 4	*	*			*	2x6W/ 2x4W
8000	*	16x8					50 x 4	*	*				2x20W
225	*												2x3W
DJX													2x6W
240	*												2x2W
270	*												2x3W
340	*											*	2x6W
540		8 x 4					9 x 4	*				*	2x6W/ 2x4,5W
640		8 x 4					9 x 4	*				*	2x6W
740		8 x 4		11/ 18			9 x 4	*	*			*	2x6W
9000	*	64x8			616		60 x 4	*	*			*	2x28W
260	*						10 x 4						2x2W
DJX II													2x6W
350					208		9 x 4					*	2x3W
550		8 x 4			220		10 x 4	*				*	2x6W/ 2x4,5W
1000		8 Tasten						*				*	2x12W
2000		8 Tasten					54 x 4	*	*			*	2x12W
290	*				208								2x3W
275													2x2,7W
1100		8 Tasten					54 x 4	*				*	2x12W
2100		8 Tasten					54 x 4	*	*			*	2x12W

PSR	One Touch Setting	Registration Memory	Virtual Arranger	Groove & Dynamics	Music DB	Drum Pads	Multi Pads	Pitch Bend	Modulation	Guide LED's	Cartridge	Floppy Disk	Ausgangsleistung Netz/ Batteriebetrieb
295		8 x 2											2x3W
450	*				227			*				*	2x6W
1500	*	8 Tasten					54 x 4	*	*			*	2x12W
3000	*	8 Tasten					80 x 4	*	*			*	2x12W
E203													2x2,5W
E303													2x2,5W
E403		8x2			256			*					2x2,5W
S500		8x8			500			*			USB-Flash		2x12W
E213													2x2,5W
E313													2x2,5W
E413		8x2			300			*					2x2,5W
EZ-200										*			2x2,5W
S700		8			Music Finder		80 x 4						2x12W
S900		8			Music Finder		95 x 4						2x12W
S550		8x8			600			*			USB-Flash		2x12W

PSR	Maße (mm)	Gewicht	Empfohlene Netzteile											Bemerkung	
			PA-3	PA-3B	PA-3C	PA-4	PA-5	PA-5B	PA-5C	PA-5D	PA-6	PA-7	PA-40		
3500	1221x393x146	8,4				*								*	
4500	1221x393x146	8,8						*							
4600	1221x393x146	8,8						*							
200	931x347x137	4,70 kg	*			*								*	
300	931x347x137	4,70 kg	*			*								*	PSR 200 Schwestermodell
400	968x405x136	6,30 kg													
500	968x405x136	6,30 kg						*							PSR 400 Schwestermodell
6700	1210x405x132	24													
600	968x404x136	6,80 kg						*							
210	908x344x110	5,10 kg	*			*								*	
310	908x344x110	5,10 kg	*			*								*	PSR 210 Schwestermodell
410	939x397x113	6,00 kg	*			*	*	*						*	
510	939x397x113	6,00 kg	*			*	*	*						*	PSR 410 Schwestermodell
5700	1067x409x160	15													
6000	1067x410x182	15													
1700	1045x412x164	12													
2700	1045x412x164	12													
220	933x372x126	7,00 kg	*	*											
230	933x372x126	7,10 kg	*	*											PSR 220 Schwestermodell
320	933x372x127	5,90 kg						*	*	*					
420	933x372x127	6,10 kg						*	*	*					PSR 320 Schwestermodell
520	973x397x146	7,40 kg						*	*	*					
620	973x397x146	7,80 kg						*	*	*					PSR 520 Schwestermodell
4000	1058x446x176	12													
7000	1058x446x178	14,5													

PSR	Maße (mm)	Gewicht	Empfohlene Netzteile											Bemerkung		
			PA-3	PA-3B	PA-3C	PA-4	PA-5	PA-5B	PA-5C	PA-5D	PA-6	PA-7	PA-40			
330	933x372x128	5,90 kg					*	*	*							
530	952x387x147	8,00 kg												*		
630	973x397x155	9,50 kg												*		
730	973x397x155	9,50 kg												*		PSR 630 Schwestermodell
8000	1058x446x178	16														Sampling mit 44.1 kHz
225	933x370x129	5,50 kg		*												
DJX	933x370x138	6,8							*	*						
240	933x370x129	5,70 kg		*												
270	933x370x129	5,70 kg		*												
340	952x387x170	7,8							*	*						
540	952x387x169	8,70 kg												*		
640	973x399x161	10,00 kg												*		
740	973x399x161	10,20 kg												*		PSR 640 Schwestermodell
9000	1114x465x183	22,5														
260	933x370x129	5,20 kg		*												
DJX II	933x370x129	6,7							*	*						
350	952x387x169	8,50 kg								*						
550	952x387x169	8,70 kg												*		PSR 450 Schwestermodell
1000	973x399x161	10,00 kg	PA-300 im Lieferumfang													
2000	973x399x161	10,50 kg	PA-300 im Lieferumfang													PSR 1000 Schwestermodell
290	952x389x140	6,80 kg		*	*											
275	933x370x129	5,30 kg			*											
1100	973x399x161	10,00 kg	PA-300 im Lieferumfang													
2100	973x399x161	10,50 kg	PA-300 im Lieferumfang													PSR 1100 Schwestermodell

PSR	Maße (mm)	Gewicht	Empfohlene Netzteile											Bemerkung		
			PA-3	PA-3B	PA-3C	PA-4	PA-5	PA-5B	PA-5C	PA-5D	PA-6	PA-7	PA-40			
295	952x388x146	7,00 kg			*											
450	952x387x169	8,50 kg									*					
1500	973x399x167	10,00 kg														
3000	973x399x167	11,00 kg														PSR 1500 Schwestermodell
E203	945x348x110	4,4		*	*											
E303	945x370x128	4,9		*	*											
E403	952x388x146	7			*											
S500	946x402x130	7,5														PA-301, PA-300
E213	945x348x110	4,4		*	*											
E313	945x370x128	4,9		*	*											Flash Memory+Style Reg.
E413	946x402x136	7			*											
EZ-200	945x348x110	4,7			*											
S700	1003x433x148	11,5														PA-300, PA-300B
S900	1003x433x148	11,5														PA-300, PA-300B
S550	946x402x130	7,5														PA-301, PA-300