

Single Volume & Tone wiring with dual voice switching and Universal Battery Pack.

1. Volume (Pull for Voice 2)
2. Tone (Pull for Coil Tap)

Note: Connect "V1 Gain" to (or jumper to) Ground for Voice 1 Low Gain Setting

Note: Connect "V1 Gain" to (or jumper to) Ground for Voice 1 Low Gain Setting

**FISHMAN FLUENCE™**