


Koch Multitone / Powertone

- G-Major interface

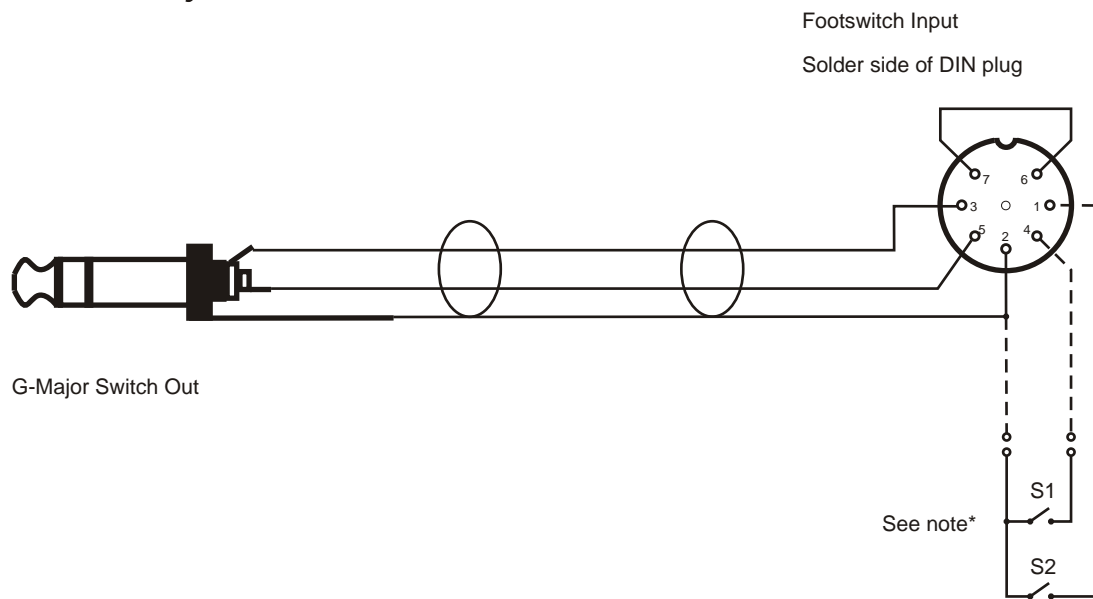

Relay 1 open	and	Relay 2 open	= Ch. 1 (clean)
Relay 1 closed	and	Relay 2 open	= Ch. 2 (gain)
Relay 1 open	and	Relay 2 closed	= Ch. 3 (ultra)
Relay 1 closed	and	Relay 2 closed	= Not defined / not to be used

* Note : As the G-Major can 'only' switch the channels you might connect an additional dual footswitch to select Rhythm/Solo (S1) or disable Reverb (S2).