

## SYSTEM

1. MEMORY PROTECT  
On, Off
2. OUTPUT ROUTING  
St Stereo  
Sb L: B3  
R: V+F+Piano  
SO L: Organ  
R: Piano
3. TRANSPOSE  
+/- 6 semi
4. FINE TUNE  
+/- 50 cent
5. SUSTAIN PEDAL POL  
OP Open  
CL Close
6. ROTOR PEDAL POL
7. SUSTAIN PEDAL MODE  
SU Sustain  
r t Sustain/Rotor
8. ROTOR PEDAL MODE  
tO Toggle  
Hd Hold
9. CTRL PEDAL TYPE  
r5 Roland EV-5  
r7 Roland EV-7  
y7 Yamaha FC-7  
tO Korg  
Ft Fatar
10. CTRL PEDAL MODE  
O Organ Swell  
S Organ/Samp Vol  
P Organ/Piano Vol
11. ORGAN TRIG MODE  
HI High Trig Point  
LO Low Trig Point

## MIDI

1. LOCAL CONTROL  
On, Off
  2. MIDI INTERFACE  
P MIDI Ports  
U USB MIDI
  3. MIDI CHANNEL  
1-16, Off
  4. LOWER CHANNEL
  5. CC MODE  
Sr Send & Receive  
r Receive  
S Send  
OF Off
  6. PROG CH MODE
  7. MIDI SPLIT MODE  
On, Off
  8. DUMP ONE  
Press STORE to dump
  9. DUMP ALL
  10. SEND CC  
Press STORE to send
- B3**
1. TONEWHEEL MODE  
u3 Vintage3  
u2 Vintage2  
u1 Vintage1  
CL Clean
  2. KEY CLICK LEVEL  
H2 Higher  
HI High  
nO Normal  
LO Low
  3. KEY BOUNCE MODE  
On, Off

4. PERC FAST DECAY  
Ln Long  
nO Normal  
SH Short
5. PERC SLOW DECAY
6. PERC NORM LEVEL  
HI High  
nO Normal  
LO Low
7. PERC SOFT LEVEL
8. PERC DRAWB 9 CANCEL  
C Cancel  
nO Normal

## ROTARY

1. ROTARY MODEL  
nO 122  
CL 122 Close
2. BALANCE BASS/HORN  
H2 30/70  
HI 40/60  
nO Normal  
b1 60/40  
b2 70/30
3. TREBLE HORN SPEED  
HI High  
nO Normal  
LO Low
4. BASS ROTOR SPEED
5. TREBLE HORN ACC  
HI High  
nO Normal  
LO Low
6. BASS ROTOR ACC