


PCB WORK INSTRUCTIONS

DWG #1145-0570-B1

NOTES:

UNLESS OTHERWISE SPECIFIED:

- 1. SQUARE PADS ON THRU HOLE PARTS (ie: CONNECTORS, DIPs, SIPs, LEDS) DENOTE PIN 1.
- 2. ALL BOARDS REQUIRE A COMPLETE AND THOROUGH VISUAL INSPECTIONS.
- 3. ALL BOARDS MUST BE BARE BOARD TESTED.
- 4. ASSEMBLE AND SOLDER PER ANSI/IPC-A-610B.
- 5. BEND AND ASSEMBLE LEDS AS IN DETAIL "A"

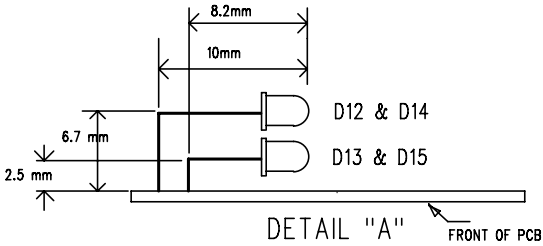

FINAL QA

- 6. CHECK TO SEE ALL POTS, JACKS, AND SWITCHES ARE MOUNTED FLUSH AND STRAIGHT

NOT VALID UNLESS STAMP IS RED	gallien technology			2234 INDUSTRIAL DRIVE STOCKTON CA. 95206 VOICE: 209-234-7300 FAX: 209-234-8420			
	APPROVALS		TITLE: MB 212 COMBO				
	INIT	DATE	SIZE: B	DRAWING NO:	1145-0570-B1	REV. B1	
	DESIGNED: D.O.	8/8/08		PART NO:	145-0570-B1		
	DRAWN: D.O.	8/27/08					
	ELEC:						
LAYER DESCRIPTION: TOP SIDE FINISH: 0.001	DATE MODIFIED	11/17/09	COMPANY: GALLIEN-KRUEGER				
	GERBER FILE NAME:	5570B1	FILENAME: 5570B1				